



# Mobility Scooter



# Midi XLS

Owner's Manual   DEHP  
BBP  
DBP 



**KYMCO Healthcare UK Limited**

Heol Mostyn

Village Farm Industrial Estate

Pyle

Bridgend

CF33 6BJ

TEL:01656 670095

FAX:01656 858353

**[www.kymcohealthcare.co.uk](http://www.kymcohealthcare.co.uk)**

## ***Dear KYMCO ForU Midi XLS Users:***

*Thank you for purchasing your Midi XLS and welcome to the family of Midi XLS riders.*

*To enjoy safe and pleasant riding, become thoroughly familiar with this owner's manual before you ride your scooter Your safety depends not only on your own alertness and familiarity with the scooter but also the Midi mechanical condition.*

*A pre-ride inspection before every outing and regular maintenance are essential. The quality of each Midi XLS is guaranteed.*

**Note:***1.The information and specifications stated in this manual are for reference only and subject to change without notice.*

*2.Your scooter may differ slightly in appearance from the images in this manual.*

## **Midi XLS *ForU* Model:**













**NOTE:** Your scooter may differ slightly in appearance from the images in this manual.

# INDEX

<b>Safety Information</b>	<b>1-9</b>	<b>Charging the batteries</b>	<b>38-41</b>
<b>Versions</b>	<b>10</b>	<b>Maintenance and Inspection</b>	<b>42</b>
		<b>Specifications</b>	<b>43-44</b>
<b>Components</b>	<b>11-12</b>	<b>Wiring diagram</b>	<b>45</b>
<b>Brief Instructions</b>	<b>13-15</b>		
<b>Adjusting the seat height</b>	<b>16-17</b>		
<b>Adjusting the seat position</b>	<b>18-20</b>		
<b>Driving Information</b>	<b>21-26</b>		
<b>Driving the Scooter</b>	<b>27-34</b>		
<b>Pusing the Scooter</b>	<b>35</b>		

# Safety information

## Symbols use

NO	Symbol	mean	NO	Symbol	mean
1		SERIAL NUMBER	6		Caution In case of application as a safety sign, the rules according to ISO 3864-1 are to be adhered to. See safety sign ISO 7010-W001.
2		DATE OF MANUFACTURE	7		Operating instructions
3		MANUFACTURER"	8		CONFORMITE EUROPEDE
4		Direct current 24V	9		The presence of this symbol indicates that the material used for the manufacture of specific type of medical device, contains several phthalates mentioned with the symbol(DHEP,and/or DBP and/or BBP)
5		Protective earth (ground)	10		The symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

** WARNING**

**Equipment in a power interruption will cause a malfunction which can be dangerous.**

- 1. Turn off the charger switch**
- 2. Wait for the power to return, turn the charger switch.**

** WARNING**

**Improper installation or use of these accessories, or scooter modification, will void the scooter warranty. This can negatively affect performance, and can even be illegal.**

# Safety information

## Symbols used

This instruction manual contains the following symbols which are used to highlight special hazards in dealing with the product or information for simplifying the handling.



This symbol identifies safety information which notifies you of hazards when dealing with the product.

## NOTE:

You will also find information about dealing with the product under this symbol.

## Intended use

The *ForU* mobility scooter is constructed for use both indoors and outdoors

It is intended to increase the mobility of persons who are both physically and mentally capable of assessing any driving situations correctly and reacting correspondingly to them at any time.



# **Safety information**

## **General Information**

### **Read the entire owner's manual thoroughly before using the Scooter!**

Ensure that:

- The owner's manual is read by all people who drive, care for and service the scooter.
- All persons who drive, care for, service the scooter have access to the owner's manual at any time.

### **Risk of accidents:**

- 1.Do NOT use the scooter if your driving capability is impaired through consumption of medicine or alcohol.
- 2.Only use the scooter for its correct intended use.
- 3.Only use the scooter when it is in perfect working order.
- 4.If any breakdowns occur, stop using the scooter immediately and secure it against unauthorised use.
5. It is imperative that you always rectify any faults which could influence the function and safety of the scooter immediately.
- 6.Observe maximum loading -- see Specifications
- 7.Only use accessories and spare parts authorised by KYMCO Healthcare.
- 8.The scooter is only authorised for transport of one person.
- 9.Do not carry out any seat adjustments while driving.

# Safety information

## Tipping hazard:

1. Do not adjust the seat if the scooter is standing on an incline.
2. Do not lean out over the armrest to the sides or over the backrest to the rear.

## Safety when driving:

Risk of accidents!

1. Check correct functioning of the brakes and lighting unit (indicators, headlights) before every journey.
2. Always use lights when visibility is restricted, either by day or by night.
3. Check the tyre air pressure regularly.
4. Always use the seat belts, if fitted when driving.
5. Do not switch the scooter off while driving.
6. Do not drive up or down gradients which are too steep, over obstacles on gradients or up and down ramps. Observe maximum climb angle--- see Specifications
7. Only drive through restricted widths, around bends, inclines and ramps with reduced suitable speed.
8. Only drive up or down inclines when the backrest has been adjusted to vertical.
9. Don't drive too close to open waters.

# Safety information

## **Tipping hazard:**

1. Do not carry out any seat adjustments while driving.
2. Only drive over obstacles and up kerbstones at the lowest point and at right angles.
3. Avoid sudden changes of direction and speed.
4. Avoid steep gradients where there is a danger of skidding (ice, snow, wet surfaces etc.).
5. Avoid loose surfaces whose characteristics you are not able to assess (woodlands, turf, beaches, gravel etc.)
6. Always drive straight up and down gradients - do not drive in zigzags.
7. Do not turn around on inclines.
8. Do not drive down steps.
9. Do not drive backwards down gradients, stairs or kerbstones, or over obstacles.

## **Danger due to unintentional movement:**

Always turn the scooter off using the keyswitch if you:

- want to get on or off
- intend to stop for long periods
- you are putting the scooter away.



# Safety information

## Safety during transport, assembly and maintenance:


If the scooter is transported in the vehicle when fully assembled:

- no persons may be sitting on the scooter during loading!
- no persons may be sitting on the scooter during transport!

## Clamping and crushing hazard:

Increased hazards due to clamping or crushing result due to the high component weight such as batteries during preparation for transport and maintenance work.

1. Always carry out any work to be done with great care.
2. Always try to get help from a second person, especially when stowing parts for transport.
3. Only carry out any work described if you are used to working with the tools required.
4. Only carry out work using suitable tools.

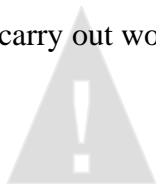

# CAUTION

# Safety information

## **Injury hazard due to improper assembly:**

1. Ensure that all components in the Scooter have been correctly assembled.
2. After assembly, check that all locking devices are holding correctly.

## **Accident hazard due to incorrect bolted connections:**


1. If bolted connections have self-locking nuts, ensure that these are replaced when reassembling.
2. Do not replace self-locking nuts with normal nuts.
3. If bolted connections have lock washers, check lock washers when reassembling and replace if necessary.

## **Intended use**

The **KYMCO Healthcare** scooter is constructed for use both **indoors (Suggest general use : indoors )**and outdoors.

This product's seat could include Phthalates material in surface. Phthalates are WHO officially announced as an environmental hormone, with the role of female hormones in the body can interfere with the body's endocrine system, advising pregnant women to avoid prolonged use of this product.

**Advise pregnant women and children to avoid prolonged use of this product.**

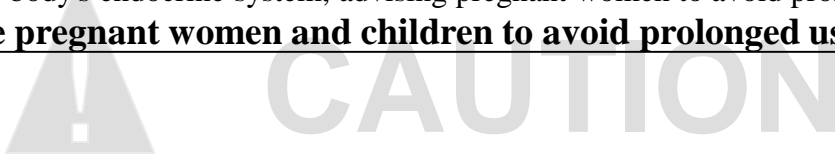

# Safety information

## Safety when handling batteries

### Fire hazard:

1. Do not cover the battery charger and ventilation slot while charging batteries.
2. Only use the battery charger in well-ventilated rooms.

### Risk of accidents:

1. Only use the original battery charger (included in delivery).
2. Let your dealer replace your battery.
3. Only use batteries as detailed in the chapter entitled "Specifications".
4. Observe warning information given by the battery manufacturer.
5. Batteries are extremely heavy.

### Burn hazard due to damaged batteries:

Batteries discharging acid can lead to serious burns.

1. Do not touch damaged batteries with your bare hands. Use rubber gloves!
2. If acid should contact your skin, wash the affected area immediately with plenty of water and contact a doctor.
3. If acid should come in contact with your eyes, rinse them out immediately with lots of water and visit a doctor.
4. Always change any clothing soiled with battery acid immediately.

# **Safety information**

## **Safety - information about electronics:**

### **Accident hazard due to failures:**

Radio, television, radio transmission devices and mobile phones produce electromagnetic fields. These can negatively influence the scooter electronics functions.

1. Do not drive close to strong radio or television transmitters (transmitter masts).
2. Switch the scooter off if you are using your mobile phone.

### **Failure in outside devices:**

The Scooter produces an electromagnetic field which can have a negative influence on the function of any other electrical devices in the immediate surroundings (such as medical devices, radio receivers, cellular phones).

**Please note that there is a note on the side of the tyre "not suitable for highway use", this does not apply to KYMCO ForU mobility scooters.**

# Versions

## Extent of delivery

After receiving your scooter, please check the following:

1. That the delivery is complete in accordance with the list below
2. The delivery condition using the inspection plan


If any faults are apparent or components are missing, please contact your supplier.

The following items are included in delivery in addition to the scooter

1. Shopping basket
2. Two vehicle keys for switching the scooter.
3. Battery Charger
4. Owner's Manual



# Components

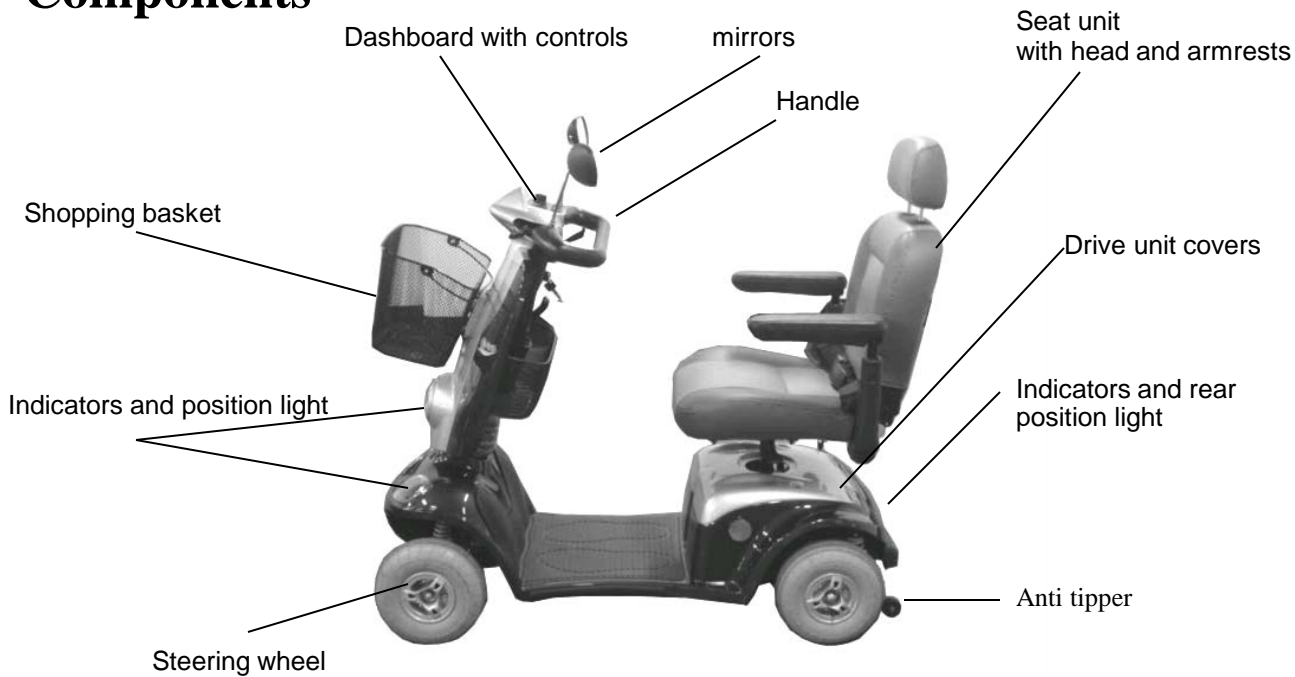


**NOTE: Your scooter may differ slightly in appearance from the images in this manual.**

# Components

## The dashboard - displays and controls

**NOTE:** Your scooter may differ slightly in appearance from the images in this manual.

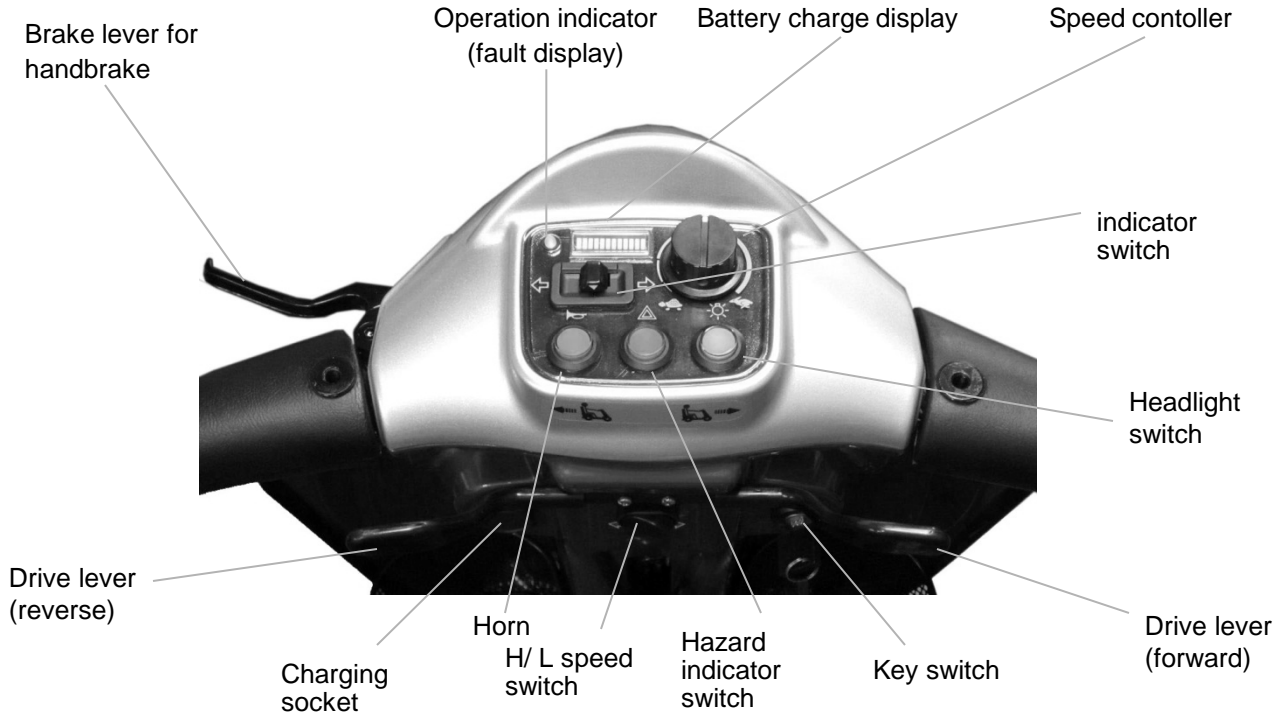

# Brief instructions

The following brief instructions should enable people to quickly get used to operating the scooter after a long period of non-use and to refresh existing knowledge of operation.

**It is imperative that you follow the instructions given in the main manual!**

## Driving the Scooter

### NOTE:

Before starting driving, adjust the seat height, the backrest and the armrests to a comfortable position. Your specialist dealer would be very glad to help.

1. Turn the seat to the outside.



2. Get in - turn the seat in the direction of travel




# Brief instructions


3. Fasten the seat belt.



4. Switch on the Scooter

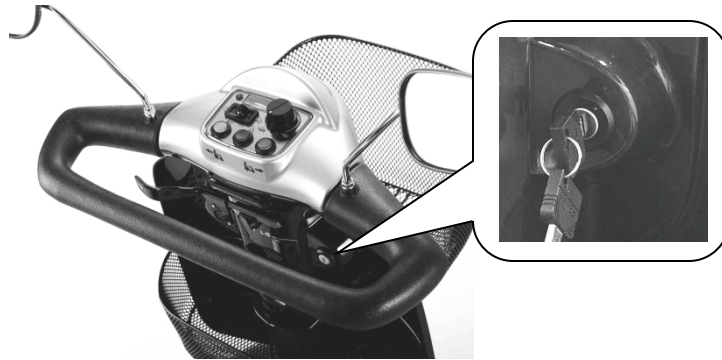

5. Check the battery charging state

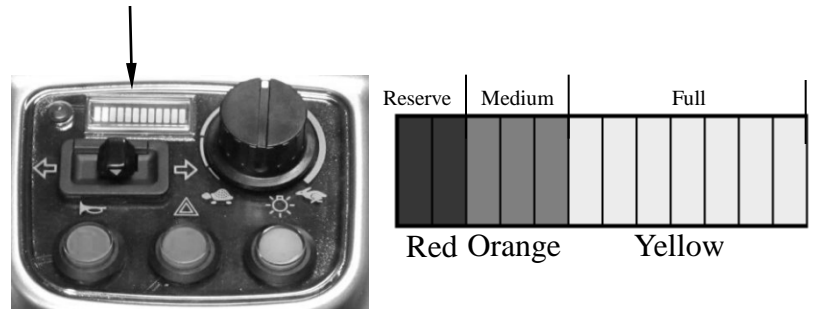

# Brief instructions


## 6. Adjusting the drive level

H = 12.8 kph (8 mph) maximum driving speed


L = 6.4 kph (4 mph) maximum driving speed



## 7. Set the maximum speed

 lowest possible driving speed

 highest possible driving speed

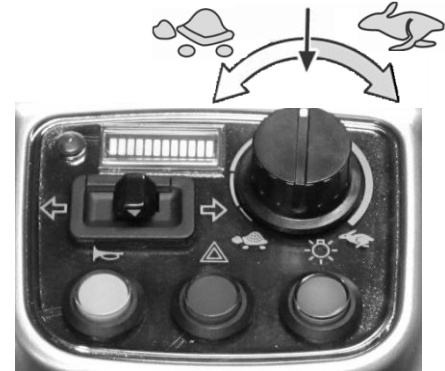

## 8. Driving

Operate the drive lever slowly until the required speed has been reached

The drive lever position controls the speed variably right up to maximum driving speed.

Forwards



# Adjusting the seat height

## Setting up the ForU scooter:

The following passage describes how to set up your scooter in order to ensure that you have a comfortable and safe drive.

Adjusting the seat height

### NOTE:

**The seat must be removed from the scooter in order to adjust the seat height. You should try to get help from a second person if possible or contact your dealer.**

## Removing the seat:

Tilt the backrest forwards.

First pull out the locking device (1) and then fold the backrest forward (2).




Lift the seat while pulling the seat lock (3) out of the seat support (4).



# Adjusting the seat height

## Inserting the seat:

1. Pull the seat lock (3) and guide the seat into the seat support (4) from above.
2. Let go the seat lock and engage the rotational adjustment by turning the seat a little one way then the other.

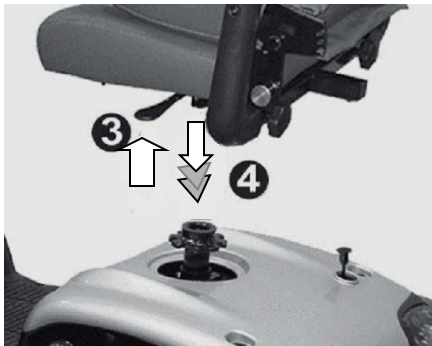


## NOTE:

**If after inserting the seat it is not possible to turn the seat or to pull the seatlock, the seat is not properly locked.**

## Tilt the backrest backwards:

1. Pull the locking lever (1) and move the backrest backwards to the required position (2).
2. Let go of the locking lever and engage the locking mechanism by pushing the backrest slightly forwards and backwards.

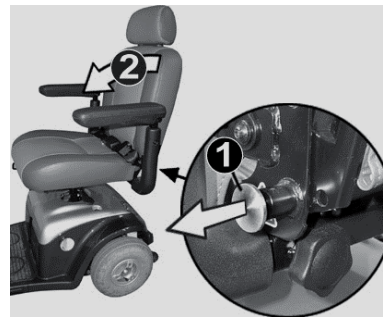

# Adjusting the seat position

## Adjusting the distance between seat and tiller:


1. Pull the locking lever (1) upwards and move the seat forwards or backwards to the required distance.
2. Let go of locking lever and engage the locking mechanism by pushing the seat slightly forwards and backwards.

### NOTE:

#### Accident hazard due to non-engaged seat:

Ensure that the seat is properly engaged after adjustment by pushing the seat slightly forwards and then backwards.

### Moving the seat

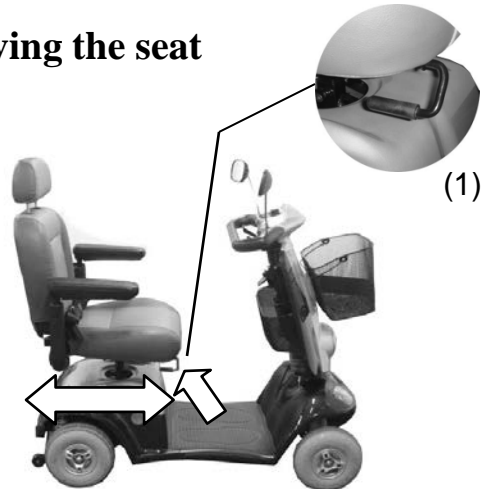



# Adjusting the seat position

## Adjusting the backrest angle

The backrest angle can be adjusted in three locking stages.

1. Pull the locking lever (6) and move the backrest forwards or backwards to the required position (7).
2. Let go of the locking lever and engage the locking mechanism by pushing the backrest slightly forwards and then backwards.



## Accident hazard if backrest is not properly engaged!

Ensure that the backrest is properly engaged after adjustment by pushing it slightly forwards and then backwards.



# Adjusting the seat position

## Adjusting the tiller angle:

Always adjust the tiller so that you can reach all displays and controls easily at any time. The tiller can be variably adjusted.


1. Push or pull the locking lever (1)
2. Push the tiller forwards or backwards into the required position(2)
3. Release the locking lever/knob.
4. Ensure that the tiller is engaged correctly by moving it backwards and forwards.

## NOTE:

### Accident hazard due to non-engaged tiller:

Ensure that the tiller is properly engaged after adjustment by pushing it slightly forwards and then backwards.

## Locking Mechanism

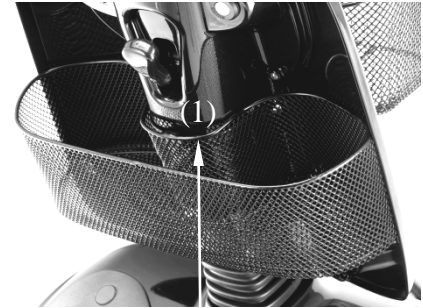

Push the locking lever –lock

Pull the locking lever -unlock



(2)

# **Driving information**

## **Information about safe Scooter driving**

### **NOTE:**

**Always carry out the safety information described in page 1 “Safety information“:**

Driving the Scooter is very simple and after a few practice sessions you will find it very easy.

The following information should help you to drive safely through traffic:

1. Always match your speed to the driving situation in which you find yourself.
2. Always reduce the speed when you are driving through:
  - unclear areas
  - narrow gaps
  - tight curves
  - inclines
  - ramps
3. Take a trial run with the Scooter in an area with no pedestrians, or in a closed-off area
4. Always steer the Scooter using both hands on the handlebars
5. Always keep your feet in the foot area while driving the Scooter

# Driving information

## Driving up inclines and down slopes

The Scooter can climb up inclines of up to  $10^\circ$  without danger.

### NOTE:

The maximum safe incline has been determined in accordance with the EN standards . The scooter is able, under the maximum specified load, to start, brake and turn. It is possible to negotiate some steeper inclines however we do not advise you to do so. The overload protection device could trip due to a combination of, incline driving duration, steepness of the incline and load applied to the vehicle.

**The scooter will slow down to a safe reduced speed to protect the motor if in overload/ over heated conditions.**


**Please switch off and allow the motor to cool down before continuing your journey.**

**You may need to choose an alternative more suitable route if overload trip re-occurs.**

### Climb angle examples:

a 1 metre long ramp should not be higher than 18 cm

a 2 metre long ramp should not be higher than 36 cm

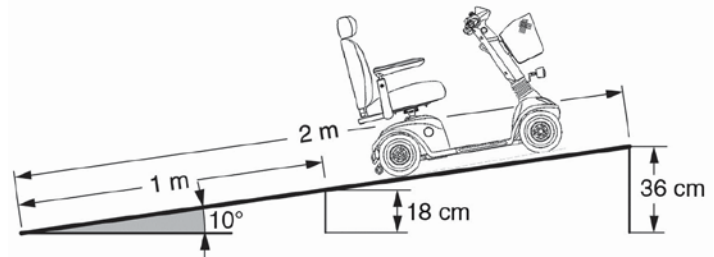

# Driving information

Avoid driving across an incline  
(always try to drive in the direction of the incline / decline).

There is an increased **danger of tipping**  
when climbing or descending gradients if:  
the Scooter is loaded at the back and  
additionally


the backrest (captain's seat) is leant towards the back and  
the seat has been adjusted to its rear position.

You can achieve increased **tipping safety** if:  
you adjust the seat in a more forward  
position.

you adjust the backrest (captain's seat)  
to be vertical

you lean your upper body slightly forwards  
(see sketch)

**Tipping hazard**

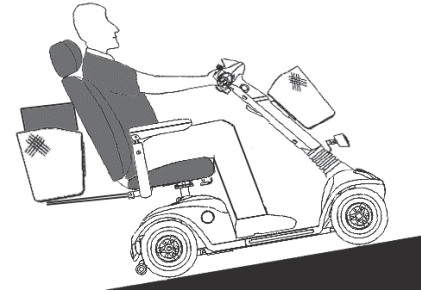

**Increased tipping safety**






# Driving information

## Overcoming obstacles:

The Scooter can climb over obstacles such as kerbstones up to height of 8 cm without any problem. Please observe the following points to make sure that your Scooter doesn't tip over while climbing obstacles: don't try to drive over obstacles which are too high  
example: kerbstones  
remedy: always climb up kerbstones at lowered entry areas such as driveways

**DO NOT** try to climb an obstacle when on an incline  
approach the obstacle at a right angle try to clear the obstacle in one go

**DO NOT** drive over the obstacle with just one wheel

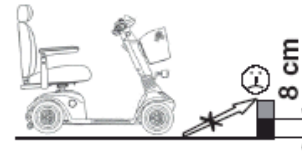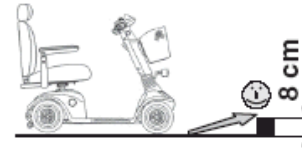


# Driving information


**DO NOT** drive backwards over an obstacle



**DO NOT** drive backwards down a kerb

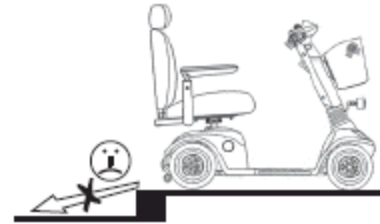

**DO NOT** drive down stairs or steps

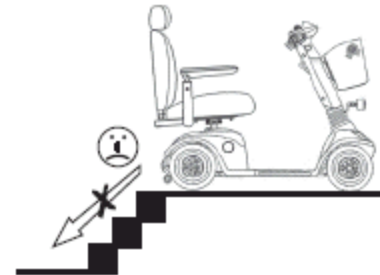

# Driving information

## Driving Information – Overcoming kerbs

### NOTE:

#### Risk of accidents:


Neogating kerbs needs some practice.

Please observe the maximum obstacle heights of **8 cm**.


Please start practicing kerb climbing with small kerbs.

1. Approach the kerb at a right angle.
2. Stop approximately 0.5 Meter /19 inches in front of the kerb.
3. Adjust the speed controller to maximum speed.
4. Press the drive lever fully then start forward .

### Approach at a right angle(1)

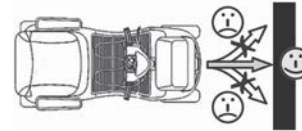

### Stop in front of the kerb(2)

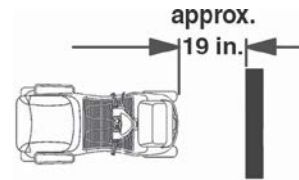

### Adjust the speed-controller(3)





# Driving the scooter

## Seat belt adjusting for length and fitting on

### Adjusting for length:

Turn the seatbelt closer (1) at right angles to the seat belt.


Adjust the length by pulling the appropriate belt side.

(a) = shortening the belt length

(b) = lengthening the belt length


Tension the loose seatbelt end by pulling the belt holder (2).

### Adjusting for length

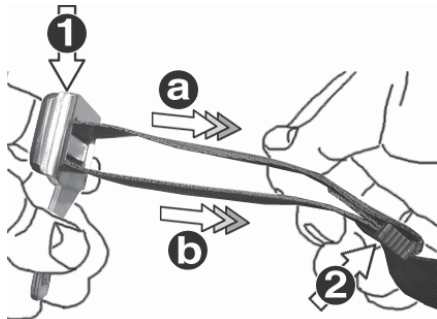

### Closing the seatbelt:

Press the closer (1) into the lock until it audibly engages.

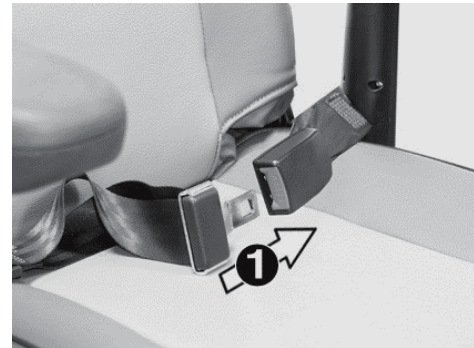

# Driving the scooter

## Turning the seat

The seat can be turned to both sides of the angle, and firmly engaged in 8 positions (each position turns 45°).

### Turning the seat:

Pull the turning lock (1), turn the seat in the required direction or position (2) and engage.

### **NOTE: Accident hazard due to incorrect seat position:**


Always turn the seat to face forwards and engage it before driving.

If the seat has been turned, the possibility of tipping is increased.

Before turning the seat, always ensure that the scooter is on an even and solid surface.

## Switching the scooter on

Insert the key into the switch and turn it to the right to switch the Scooter on.

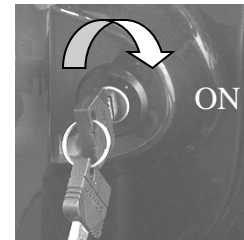

# Driving the scooter

## Operation indicator and fault display

### Operation indicator on :

the Scooter is switched on and ready for driving.

### Operation indicator blinking :

please contact your supplier.

## Adjusting the speed

### NOTE:

Use the adjustment facilities to adjust the speed to suit local conditions.

Select a lower speed if you are driving through narrow gaps, on inclines or through crowds.

### Preselecting the drive level

You can use the drive level selection switch to set the maximum driving speed.

### Drive levels:

**H(High)** = 12.8 kph (8 mph) maximum driving speed

**L(Low)** = 6.4 kph (4 mph) maximum driving speed

Operation indicator



Move the Hi/Lo speed switch to setting **H** or **L** to adjust the required maximum driving speed.


# Driving the scooter


## Adjusting the speed

Your maximum driving speed can be variably adjusted using the speed controller.

Maximum driving speed = drive lever pressed as far as stop

### Controller symbols:

 = lowest possible maximum driving speed for the required drive level

 = highest possible maximum driving speed for the required drive level

Adjust the required maximum driving speed by turning the speed controller.

### Speed controller





# Driving the scooter

## Driving :

Hold the tiller firmly in both hands.

Press the drive lever (1) in the direction of travel until the required speed has been reached.




## Brakes:

### Using the motor brake

Let go of the drive lever (1).

The drive lever stops in the central position

- the Scooter uses the motor to brake.

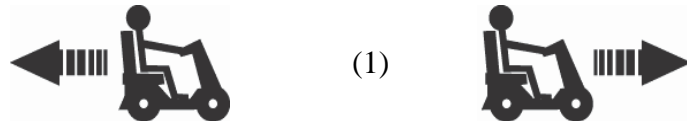

**NOTE:Emergency braking = let go of the drive lever:**

The drive lever automatically returns to the central position if you let go, the Scooter automatically brakes using the motor.

# Driving the scooter

## Using the handbrake:

To use the handbrake, pull the brake lever (2) slowly towards the handlebar.

## NOTE:

### Tipping hazard

Pulling the brake lever too violently can cause the Scooter to tip over.

Pull the brake lever slowly in order to brake the Scooter.




## Indicating

### Indicate switch (3):

indicate right = indicate switch to the right

indicate left = indicate switch to the left

When turning is completed, press the switch (3) to switch the indicators off.

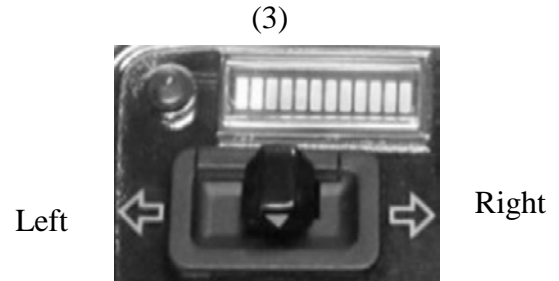

# Driving the scooter


## Switching on the headlights

### Pressure switch (4):

switch on = press switch once

switch off = press switch again

The switch indicator lamps shows whether the headlight is switched on or not.

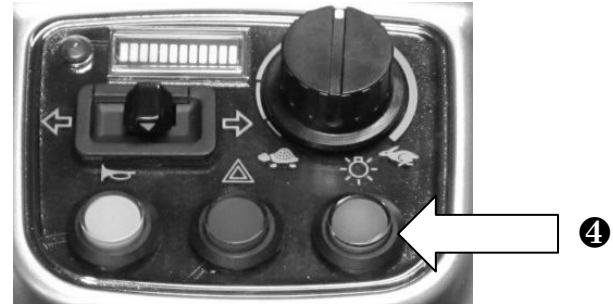


### NOTE:

If you drive with the headlights on, the Scooter driving range will be reduced.

## Using the horn

Press the horn button (5).

It will sound for as long as you hold the button down.

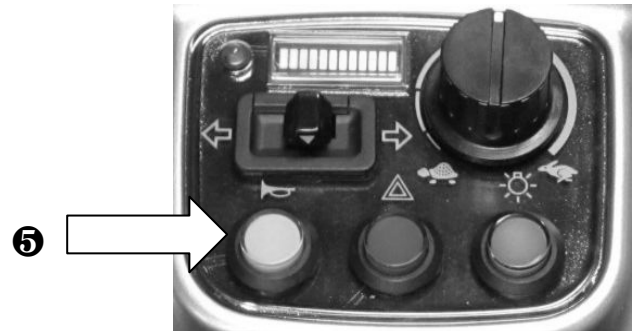

# Driving the scooter

## Switching off / parking the Scooter

Turn the key to the left to switch the Scooter off.

Always turn the Scooter off using the keyswitch if you:

-want to get on or off.

- intend to stop for long periods.

Always remove the key from the keyswitch if you:

-want to park the Scooter and get off.

## Hazard lamps

### Pressure switch :

switch on = press switch once



switch off = press switch again

The switch indicator lamps shows whether the hazard lamps are switched on or not.

### NOTE:

Leaving the Scooter with the hazard lamps on uses up the battery.

OFF

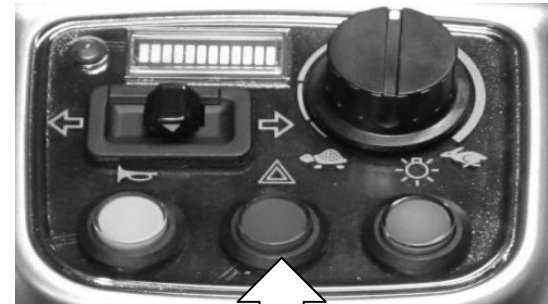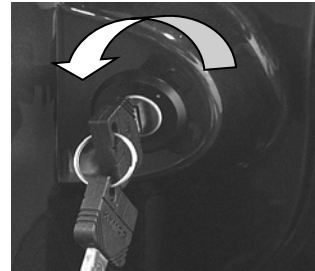

6



# Pushing the scooter

In order to be able to push the Scooter, you must disengage the drive motor.

The disengaging lever (1) is located on the right-hand side of the Scooter.

No one is permitted to sit on the Scooter when it is being pushed.



= Pushing (a):

Switch off the Scooter.

Pull the engaging lever (1) upwards as far as the stop (limit position).



= Driving (b):

Push the engaging lever (1) downwards as far as the stop (limit position).

## NOTES:

1. Always switch the Scooter off to push it.
2. If a pre-set speed is exceeded while you are pushing the Scooter, the drive motor will switch on automatically and brake the scooter




## Attaching the shopping basket:

Push the shopping basket (1) from above into the basket holder receptacles (2) on the tiller.

### NOTE:

Use the shopping basket only for small loading.(approximate 3kg below)

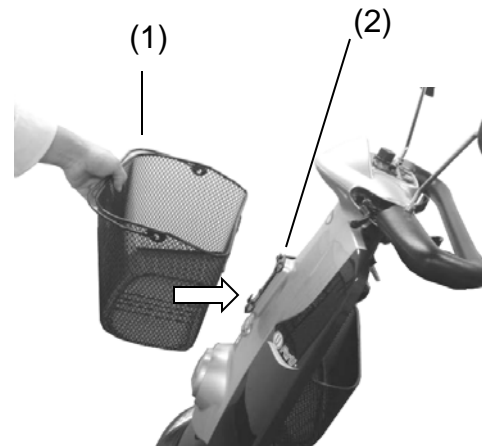

# Charging the batteries

Please also see the information given in the chapter entitled “Things to know“.

## **Charging information:**

The surrounding temperature should be between 10° and 30° Celsius.

The charging time will increase at lower temperatures.

Only use the original battery charger (included in delivery).

Only use the battery charger in a dry and well-ventilated room.

Do not cover the battery charger and ventilation slot while charging batteries.

The battery charger has an automatic switch-off device which prevents overcharging the batteries. Do not leave the battery charger connected to the scooter for more than 24 hours.

- The batteries can be charged overnight.

Switch the Scooter off before charging the batteries.

## **Charging times:**

Between 8 and 9 hours depending on current battery charge state.

## **NOTE:**

The battery charger is designed to be able to charge completely discharged batteries within eight hours to 80% of their capacity.

## Preparing the battery charger

Plug the mains cable plug (1) into the jack socket (2) on the battery charger.




## Charging the batteries

Switch the Scooter **off**.

Engage the engaging lever for push mode into the “drive” position.

Switching off

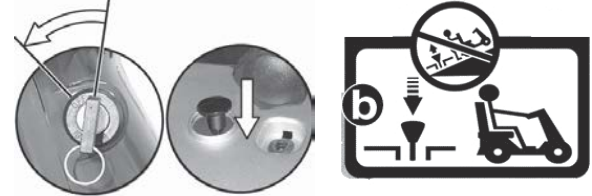

**It is imperative that you observe the sequence for connecting and disconnecting the battery charger.**

The jack socket (3) for connecting the battery charger is located on the front of the tiller.




- (1.) Connect the battery charger plug (4) to the Scooter charging socket.



# Charging the batteries

(2.) Connect the battery charger mains plug (5) to a mains socket and switch on.

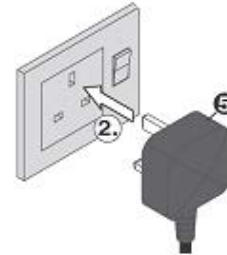

Switch the battery charger on at the toggle switch (6).  
LED information at battery charger during charging:

LED -> Colour -> Meaning

- (a) -> Red -> battery charger switched on
- (b) -> Yellow -> charging in progress
  - > Green -> charging complete, battery completely charged



## WARNING


The use of the coupler and detachable powercord plug isolates from the main power. It is not to be used with other equipment, this will result in the equipment being difficult to use.

# Charging the batteries


Switch the battery charger off at the toggle switch (6).




(1.) Switch off and Remove the battery charger plug from the mains socket.

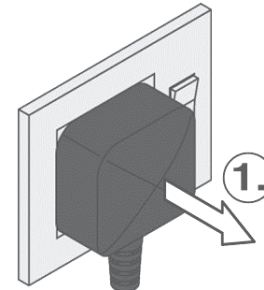

(2.) Pull the battery charger jackplug out of the Scooter jack socket.

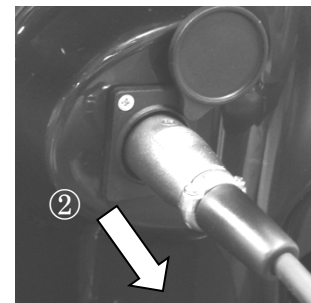

 <b>WARNING</b>
To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.

# Maintenance and Inspection

## Maintenance and Inspection

If you find any faults on your scooter during maintenance which are not covered by the repair information, please contact your dealer.

Always remove faulty scooters from operation and secure them against unauthorised use (remove key).

### Daily maintenance before start of journey

Check the brakes by driving slowly and then braking.

Check that the lights and indicators are functioning correctly.

Make a visual check of wheels and tyres for damage and loss of pressure.

### Weekly inspections / tyre pressure

#### **NOTE: Danger of injury due to overpressurised tyres:**

The tyres will burst if inflated with too much air pressure

Never inflate the tyres over the specified pressure.

Only use calibrated instruments to measure the air pressure in the tyres (such as are available at filling stations).

Remove valve cap (1) - check air pressure.

**Inflation pressure = 25 -28 PSI**

**18 - 20 hPa**

**1.8 - 2.0 bar**

Screw the valve cap back on.



# Specifications

## General data

### Midi XLS



Version .....	4-wheel version
Turning radius.....	1560 mm
Speed .....	12.8 kph (8 mph) Maximum
Range* .....	approx. 40km( 25Miles)
Maximum climable incline .....	10°
Maximum climable obstacle.....	80 mm
Total weight (ready for driving incl. batteries) .....	102 kg
Weight heaviest part.....	26.1 kg
Maximum working load (user weight).....	160 kg (350lb)
Tyre size .....	3.00 - 5
Tyre pressure.....	28 PSI (2.0 bar)
Working voltage (battery voltage).....	24 Volt
Batteries .....	2 batteries(12V 50AHX2)



Storage temperature .....	- 40°C ~ + 65°C Ambient
Temperature .....	- 25°C ~ + 50°C
LED:	
Position light .....	24 Volt / 0.41 Watt
Rear position light .....	24 Volt / 0.41Watt
Rear brake light.....	24 Volt / 0.41Watt (auxiliary brake version)
Front indicator .....	24 Volt / 0.6 Watt
Rear indicator .....	24 Volt / 0.6 Watt
Head light .....	24 Volt / 0.41Watt

Theoretical range is calculated under test conditions in accordance with European standards. Actual range in normal use will depend on many factors, including the condition of the vehicle and its batteries, the weight of the driver, correct tyre pressure, ambient temperature, and the gradient and surface of the road or pavement.

# Midi XLS WIRING DIAGRAM

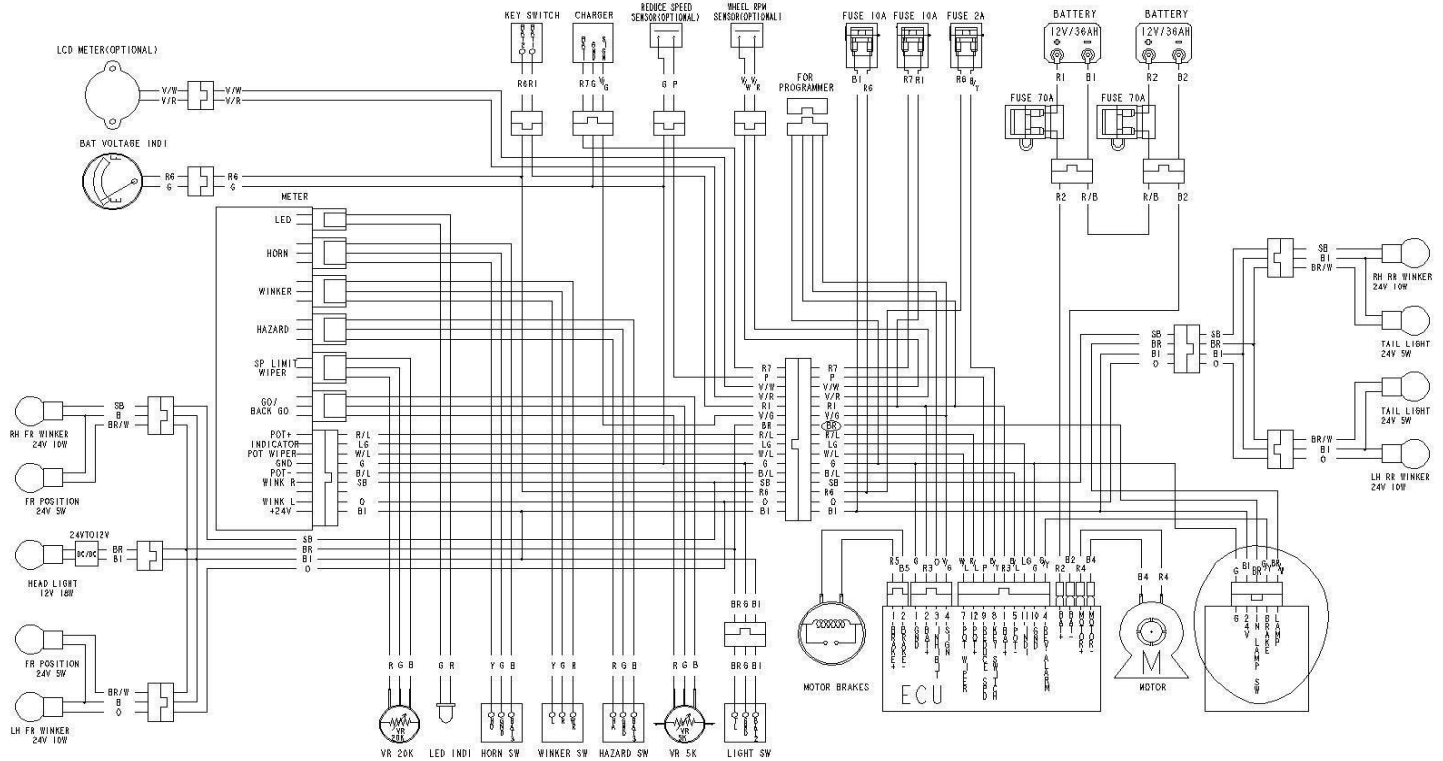

COLOR COMB GROUND/MARKINGS

B	BLACK	BR	BROWN
Y	YELLOW	O	ORANGE
L	BLUE	SB	SKY BLUE
G	GREEN	LG	LIGHT GREEN
R	RED	P	PINK
W	WHITE	GR	GRAY
V	VIOLET		

REV.2012.03.02

# Revision Information

## Midi XLS ForU-EQ35BC(UK version only)

Item	Page	Before	Revised
Shopping basket	12,37	With shopping basket	Without shopping basket
Battery charge display	13	Turntable	LED
LED	44	Bulbs	LED
Symbols	1	NO	Symbols use

**Revised date:June.2012**

By KWANG YANG Motor Co., Ltd.  
Sixth Edition, June.2012  
All rights reserved. Any reproduction or  
unauthorized use without the written permission of  
KWANG YANG Motor Co., Ltd.  
is strictly prohibited.  
T300-EQ35BC -A1



- NO.35 Wan Hsing Street, San Min District Kaohsiung city, Taiwan, Republic Of China
- NO.61, Chung-Shan Sth Rd , Lu-Chu Village , Kaohsiung County, Taiwan, Republic Of China

Date printed:2012. JUN